

Barcode Printers

Barcode Printers Set-Up

In general, Barcode Printers are usually attached to LPT2 and set-up the same way that you would set-up a receipt printer. See pages _____

Note: *Barcode printers will not print a test page unless the printer is in **DUMP MODE**. To put a barcode printer in **DUMP MODE** you must hold down the **PAPER FEED BUTTON** while powering on the printer. Once the printer is in dump mode, you will be able to print a test page.*